









CHANGING ALARM MASTER CODE ON RISCO LIGHT SYS PANEL


Default Grand Master code will be given at the hand over of the house.

To set/change a user code:

1. Press  and enter your code followed by .
2. Using the arrow keys, scroll to the option Codes/Tags and press .
3. Scroll to Define and press .
4. Select the user index number and press .
5. Select Edit Code and press .

Note:

In the LightSYS™2 system, the User Index number range is from 00 to 15.
(00=Grand master)


6. Enter the new code followed by .
If successful, a single confirmation beep is sounded; if not, three quick error beeps are sounded
7. Repeat the above steps for additional codes until you have completed your list

Deleting User Codes

At times, you may want to completely delete a user code. Note that it is impossible to delete the grand master code (although it can be changed).

The system must be disarmed in order to delete user codes.

To delete a user code:

1. Follow steps 1-4 of the previous procedure (See *Setting/Changing User Codes*)
2. Scroll the menu to the option Delete and press .
3. If successful, a single confirmation beep is sounded; if not, three quick error beeps are sounded.
4. Repeat the above steps for deleting additional codes.